

Fig. 1

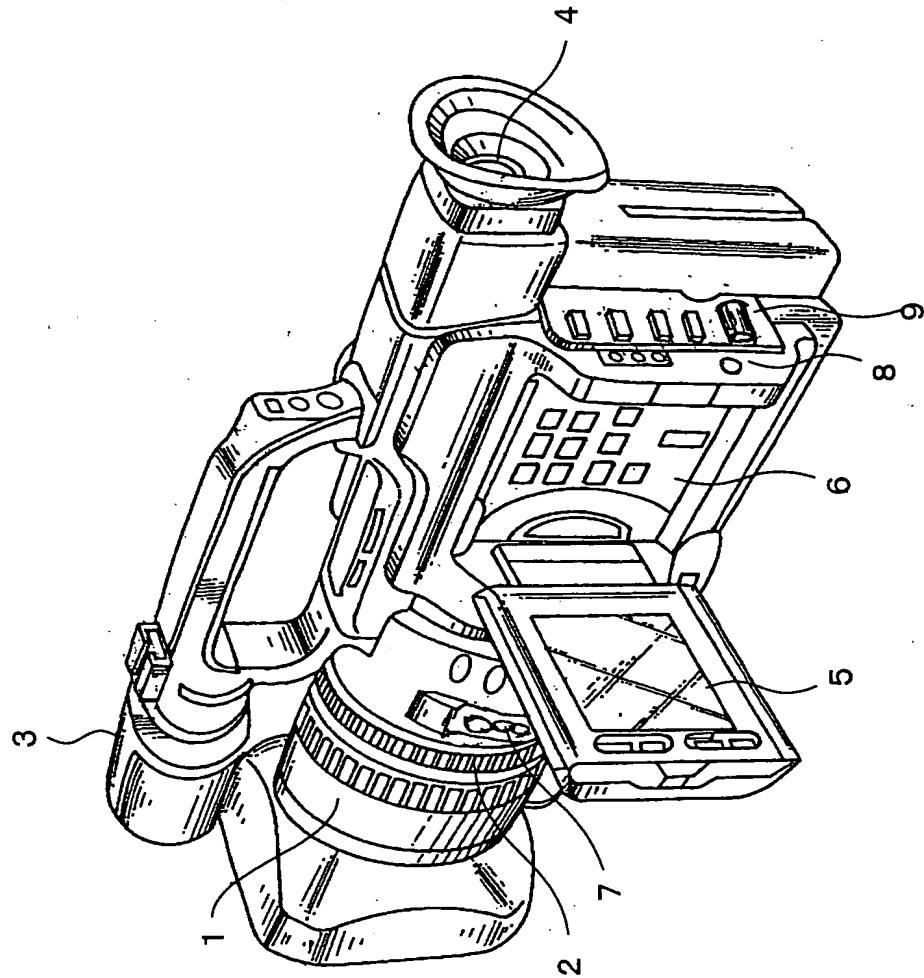 


Fig. 2

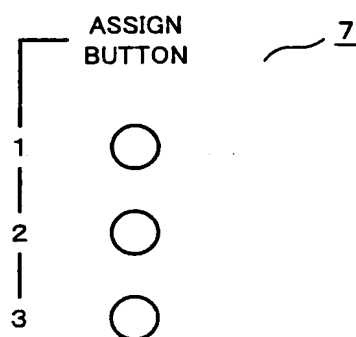 


Fig. 3

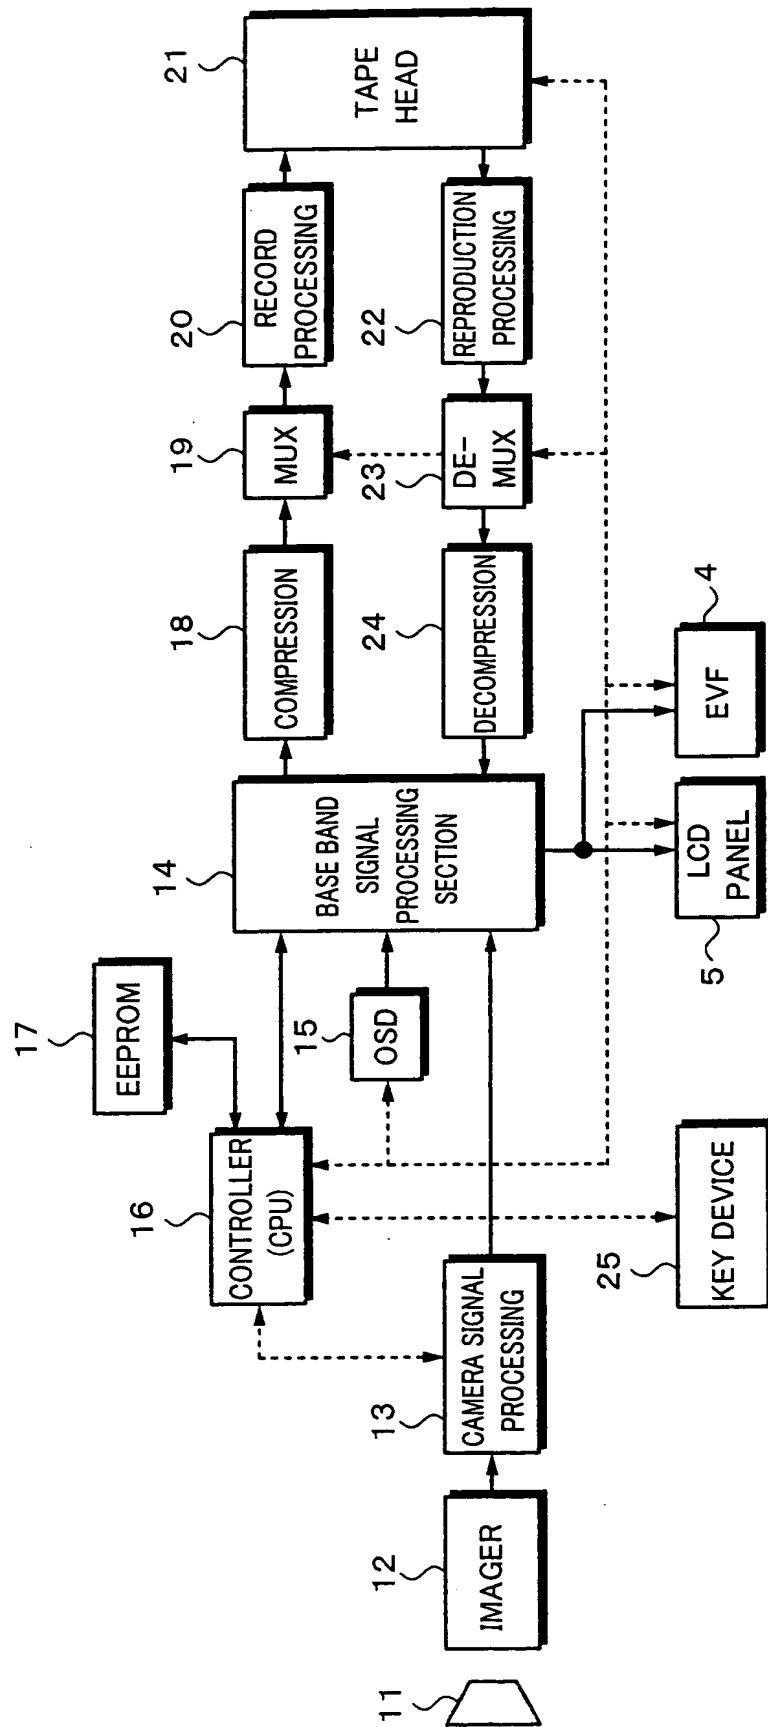 


FIG. 4

Fig. 4A

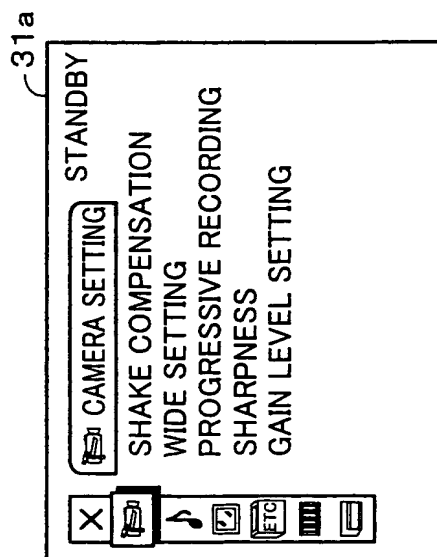 


Fig. 4B

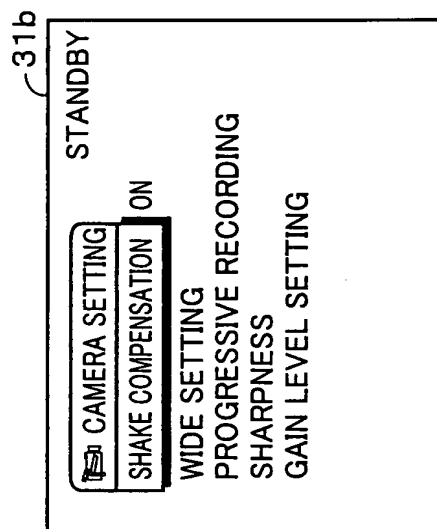 


Fig. 4C

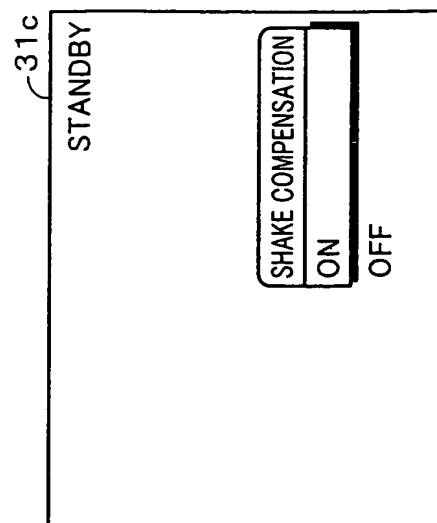 


Fig. 4D

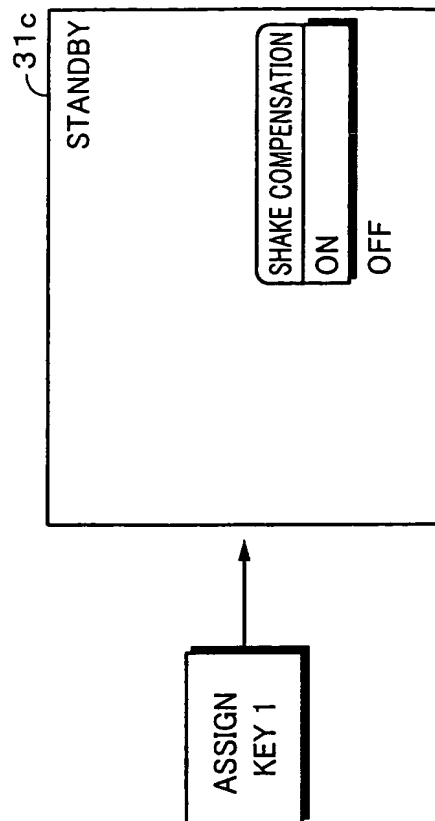 


Fig. 5

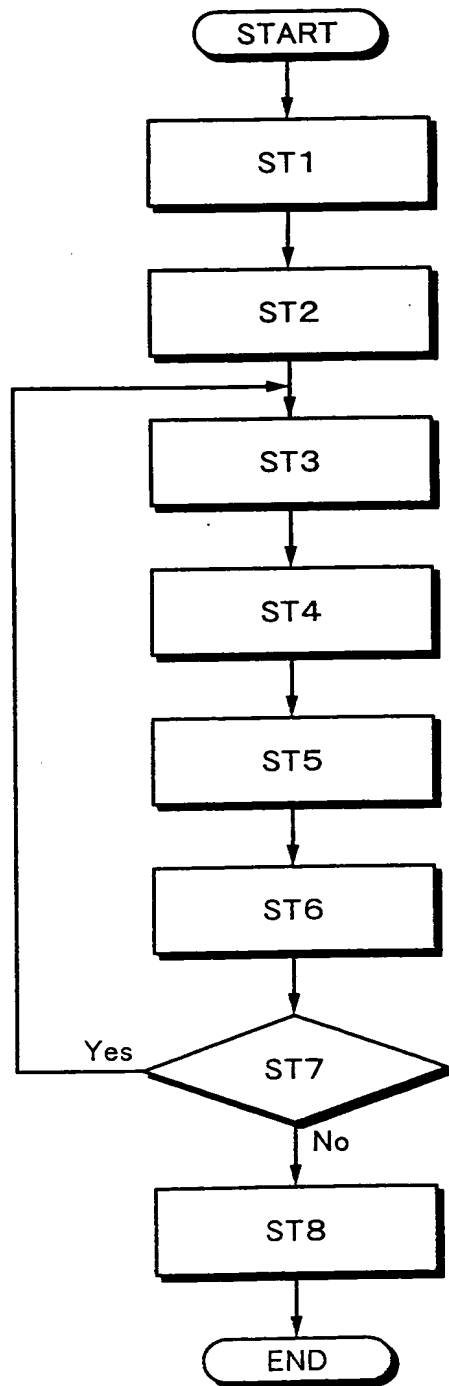 


Fig. 6A

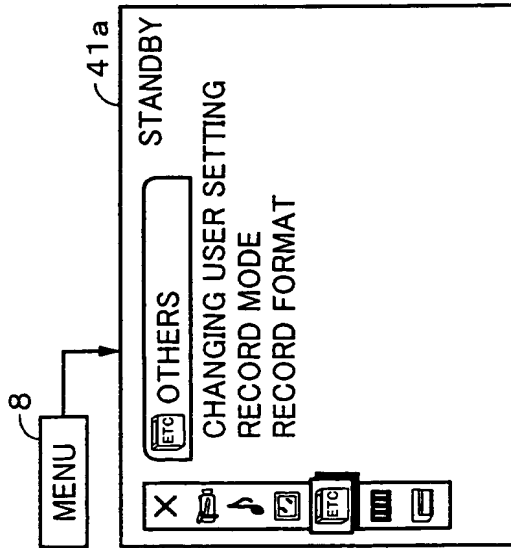 


Fig. 6B

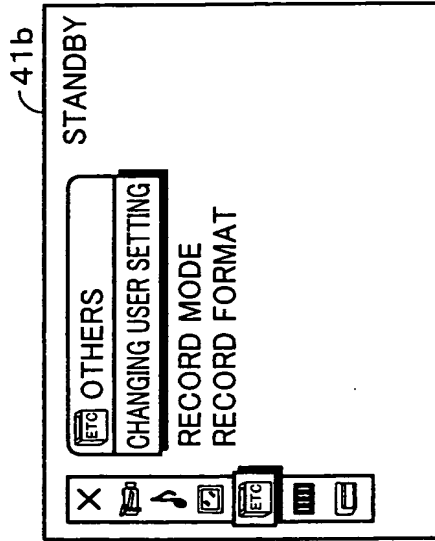 


Fig. 6C

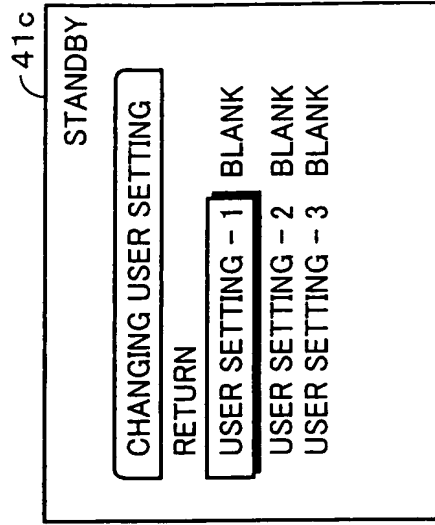 


Fig. 6F

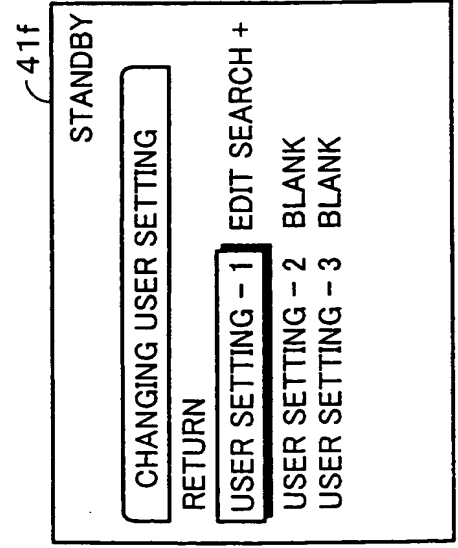 


Fig. 6E

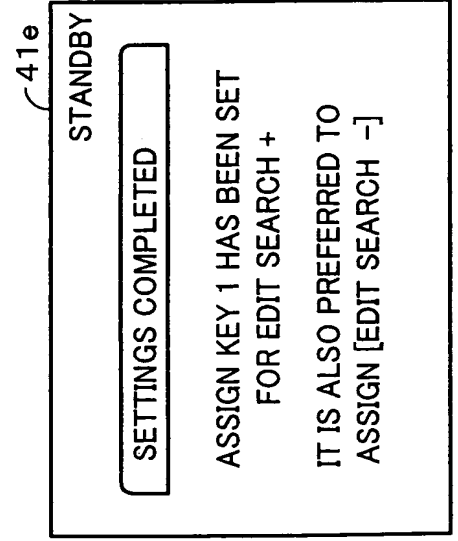 


Fig. 6D

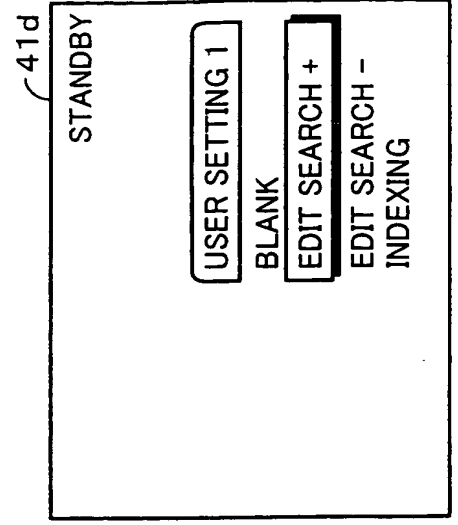 


FIG. 7

Fig. 7A

Fig. 7B

Fig. 7C

 
 
 
 
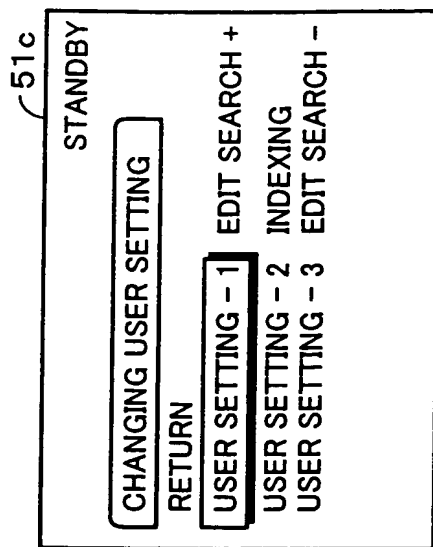 


Fig. 7E

Fig. 7D

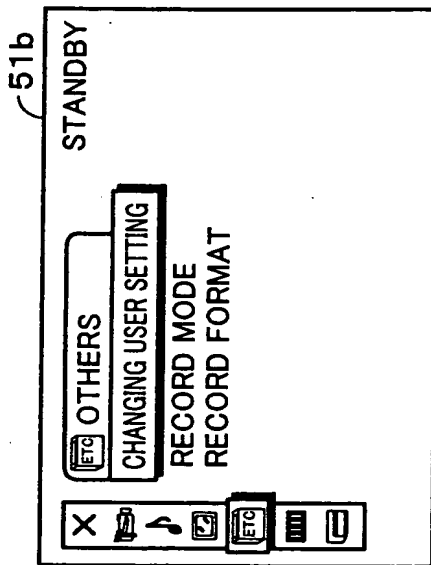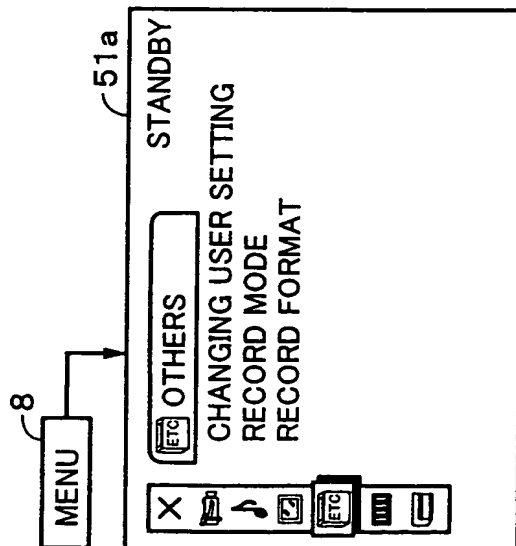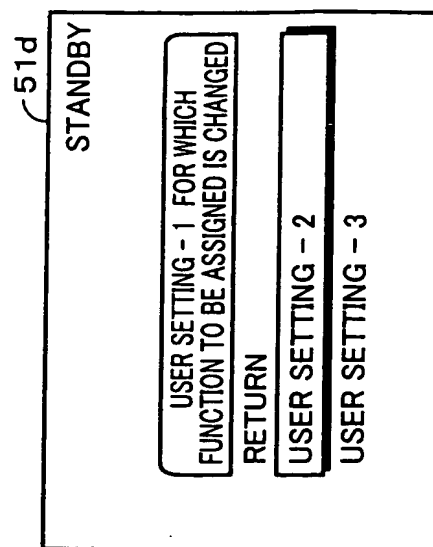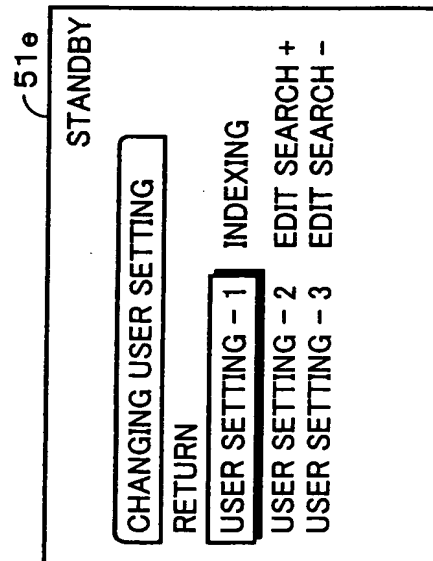

DESCRIPTION OF REFERENCE NUMERALS

1	LENS HOUSING SECTION
2	ZOOM RING
3	STEREO MICROPHONE
4	ELECTRONIC VIEW FINDER
5	LIQUID CRYSTAL DISPLAY PANEL
6	CONCAVE HOUSING PORTION
7	ASSIGN KEYS
8	MENU BUTTON
9	SELECTION/PUSH-CONFIRMATION DIAL
11	LENS
12	IMAGER
13	CAMERA SIGNAL PROCESSING SECTION
14	BASE BAND SIGNAL PROCESSING SECTION
15	OSD SECTION
16	CONTROLLER
17	EEPROM
18	COMPRESSION ENCODER
19	MULTIPLEXER
20	RECORD PROCESSING SECTION
21	TAPE HEAD SECTION
22	REPRODUCTION PROCESSING SECTION
23	DEMULTIPLEXER
24	DECOMPRESSING DECODER
25	KEY DEVICE

ST1 PRESS MENU KEY (OPEN MENU).

ST2 SELECT "CHANGING USER SETTING" FROM ITEMS.

ST3 SELECT ASSIGN KEY TO WHICH FUNCTION IS ASSIGNED.

ST4 SELECT FUNCTION TO BE ASSIGNED AND ASSIGN SELECTED FUNCTION.

ST5 SETTING RESULT INDICATION SCREEN APPEARS.

ST6 BACK UP LATEST ASSIGN KEY INFORMATION TO NON-VOLATILE MEMORY.

ST7 CONTINUE TO ASSIGN FUNCTION TO KEY ?

ST8 PRESS MENU KEY (CLOSE MENU).